

# CRASH ATTENUATOR incl signalling board with light arrow and fully automatic controller

New model: "Julietta" Max

Equipped with COC approved rear bumper, now successfully tested!

#### Crash cushion

- · Corrosion free and waterproof
- Equipped with lighting; fully operational when working/driving
- · Rear corner protection left and right
- Electro-hydraulic levering of the crash attenuator
- · Standard automatic control from the driver's seat
- Coating following EN ISO 11925-2 (EC E)
- Standard surrounding lighting installed
- · Acoustic signal for levering the crash cushion

A crash attenuator is a cushion of some sort, which absorbs the shock of a collision. It is a wrinkling zone. The crash cushion is parked upstream of the team of workers and acts as a shield against a possible colliding vehicle. In case of collision, the cushion will be crushed and will be deformed; during deformation the crash cushion will absorb the energy of the collision. The energy absorption happens gradually and the driver isn't stopped suddenly at once.



## Coupling mechanism:

- Heavy metal construction
- · Hydraulic cylinders for levering the cushion
- The cylinders are operated with an electrohydraulic pump (24 V)

### Mounting

- · Coupling frame with adjustable king pins (height)
- Quick coupling mechanism of the crash attenuator for easy handling onto another vehicle, removable by a forklift
- Maximum 3 cable connections with the vehicle: driving lighting, control panel and optionally a 24 V connector



ONLY APPROVED CRASH ATTENUATOR

Made in Belgium

 Fuly in house R&D and manufacturing



Rental

• Repair & maintenance

The cushion is easily changed and replaced in case of damage or collision











## Signalling panel (belgian version)

The signalling panel can be adjusted according to the regulations of your country

- Retroreflective red & white striping
- Traffic sign
- Repositionable sign blue arrow
- 22 LED Arrow Lights (Ø 200mm) light up left arrow / right arrow / cross
- LED's take automatically the same position as the rotating white arrow mounted on the blue sign
- 2 x 2 mega LED lights (Ø 200mm) are mounted in the corners of the signalling panel
- Fully automatically operated from the cabin of the truck
- The LED lights are conform the regulations EN 12352
- The illumination of the lights is controlled automatically by a light sensor. Depending on the ambient light, the illumination of the LED lights will vary. When operated in daylight the illumination will be higher. During night, the illumination will be lower in order to overcome dazzling.
- The light arrow is controlled by controllers whereby the circuit boards are superfluous (the controllers are not sensitive to changes in temperature -40° +60°)

The complete module is hot-dipped galvanized and fully conform all the regulations and additional requirements.

Conformity with other regulations are possible.

The signalling panel is fixed onto the crash attenuator and fully tested !!!

- Fuly in house R&D C€
- Sales
- Rental
- Repair & maintenance





#### "Julietta" Max

- Crash cushion 100K
- Homologated rear bumper and road lights (COC)
- Signalling panel with LED lights
- 4 double led flash beacons (2 at the top and 2 at the bottom)

- The light arrow is controlled by controllers whereby the circuit boards are superfluous (the controllers are not sensitive to changes in temperature -40° +60°)
- Automatic operation (from the cabin of the truck)

#### **STANDARD:**

connection directly to the battery of the truck-> without batteries and battery cases



#### **OPTION:**

Operation completely autonomously by batteries
-> with battery cases, switches and connectors, without batteries





- Fuly in house R&D and manufacturing ☐ €
- Sales
- Rental
- Repair & maintenance



## Safety precautions for the crash attenuator

# Locking / Safety

Mounting of the cushion with safety pins!



## Operation

Stuer-Egghe mounts a fully automatic control unit for the safety of your workers

The control panel with LCD-screen, context menus and functions buttons enables operation from the cabin **AUTOMATICALLY**:

- Position the crash attenuator (lowering of the crash cushion, working position) or levering of the crash cushion, driving position), while driving.
- · Choosing the function of the light arrow
- Announcement on the LCD-screen of the position of the light arrows





The movement of the crash attenuator can be stopped immediately with the emergency stop button There are 2 emergency stops:

1 in de cabin of the truck, 1 on the crash attenuator



Full automatic operation

- Sales
- Rental
- Repair & maintenance